

SUPPLEMENT SHEET FOR
J-31 Wood Splitter Operator's Manual No. 9-51830
J-32 Wood Splitter Operator's Manual No. 9-51840

For Wood Splitter Models J-31 and J-32:

For All Tractors except the 448:

Install the two hose clamps on each end of the hose connecting the return tube from the travel control valve to the bottom tube of the oil cooler.

For Model J-31 Wood Splitter Only:

Two "longer" bolts are provided for the rear seat support right hand bolt.

Use the 3-1/2" (90 mm) bolt for tractor Models 220, 222, 224

Use the 2-1/2" (65 mm) bolt for tractor Models 444, 446, 448

For Model J-32 Wood Splitters Only:

Check and adjust if necessary the hydraulic PTO valve relief valve pressure setting. The proper setting is 2450 to 2550 PSI (17,000 to 17,500 kPa).

SAFETY RULES



The safety messages contained in this manual are to be used together with the safety messages appearing in your Tractor Operator's Manual. Make sure you review both manuals before you operate the Tractor, Wood Splitter combination.



CAUTION: Read the operator's manual completely before attempting to use this wood splitter.



CAUTION: Before starting this wood splitter, review the "Rules for Safe Operation". Failure to follow these rules may result in serious injury to the operator or bystanders.



CAUTION: Do not allow anyone to operate your wood splitter who has not read the operator's manual or has not been instructed on the proper use of the wood splitter.



CAUTION: Never allow children or untrained adults to operate this wood splitter.



CAUTION: Most accidents occur when more than one [1] person operates the wood splitter. If a helper is assisting in loading logs to be split, never actuate controls until the helper is clear of the area.



WARNING: Never allow anyone to ride on the wood splitter.



CAUTION: Never transport cargo on the wood splitter.



CAUTION: Extremely high fluid pressures are developed in hydraulic wood splitters. Pressurized hydraulic fluid escaping through a pin hole opening can puncture skin and cause severe blood poisoning. Therefore, the following instructions should be heeded at all times.

- 1 Do not operate the wood splitter with frayed, kinked, cracked or damaged hoses, fittings or tubing.
- 2 Stop the engine and relieve hydraulic system pressure by stroking the valve handle both ways several times before changing or adjusting fittings, hoses, tubing or other system components.
- 3 Do not adjust the pressure settings of the pump or valve.
- 4 Do not check for leaks with your hand. Leaks can be located by passing cardboard or wood over the suspected area. Look for discoloration. If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.



CAUTION: Keep the operator zone and adjacent area clear for secure footing.



WARNING: Always operate the wood splitter with all protective equipment in place and all controls properly adjusted.